Can Opener

READ BEFORE USE

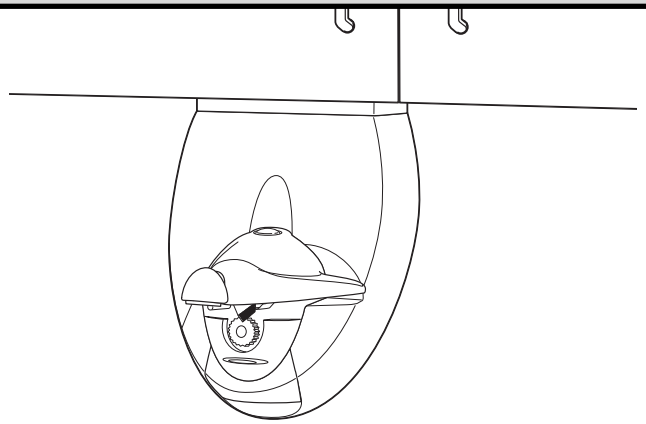

English 2

USA: 1-800-851-8900
Canada : 1-800-267-2826
En México 01-800-71-16-100

840123500

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Remove can from can opener and check can contents to remove any pieces of label or metal shavings.
3. To protect against risk of electrical shock, do not put can opener body, cord, or plug in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
6. Avoid contacting moving parts.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer service number for information on examination, repair, or electrical or mechanical adjustment. No user-serviceable parts inside.
8. The use of attachments not recommended or sold by Hamilton Beach/Proctor-Silex, Inc. may cause fire, electric shock, or injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Do not open pressurized (aerosol-type) cans.
13. Do not open cans of flammable liquids such as lighter fluid.
14. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS

OTHER CONSUMER SAFETY INFORMATION

This appliance is intended for household use only.

This appliance is equipped with a polarized plug. This type of plug has one blade wider than the other. The plug will fit into an electrical outlet only one way. This is a safety feature intended to help reduce the risk of electrical shock. If you are unable to insert the plug into the outlet, try reversing the plug. If the plug should still fail to fit, contact a qualified electrician to replace the obsolete outlet. Do not attempt to defeat the safety purpose of the polarized plug by modifying the plug in any way.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in, or tripping over a longer cord. If a longer cord is necessary an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the can opener. Care must be taken to arrange the extension cord so that it will not drape over the counter-top or tabletop where it can be pulled on by children or accidentally tripped over.

WARNING: To reduce the risk of personal injury, keep hair and loose clothing away from lid opener and other moving parts of the can opener while using.

Parts and Features

1. Mounting Screws (4)
2. Mounting Washers (4)
3. Mounting Spacers (2)
4. Cutting Assembly Release Button
5. Magnetic Lid Holder
6. Can Guide Pin
7. Geared Wheel
8. Piercing Lever
9. Cord Storage

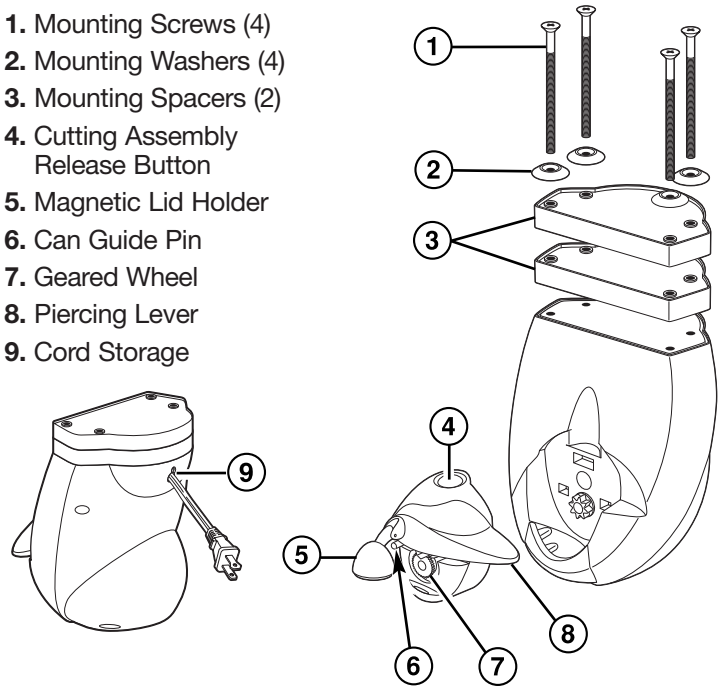

Table A

Height of Front Overhang (Cabinet or Shelf)	Spacers Needed
0 to ½ inch (1 cm)	0
½ to 1¼ inches (1 to 3 cm)	1
more than 1¼ inches (3 cm)	2

Installation

This can opener is designed to be installed under a cabinet or shelf. When selecting a location for installation, consider the following:

- An electrical outlet should be within easy reach of the plug so the cord does not drape over a heating or cooking appliance, a sink or basin, or get in the way of your normal work space. **HINT:** Before drilling any holes, plug unit into desired outlet and hold can opener in proposed location to ensure cord will reach.
- Do not install can opener above a cooking or heating unit, such as a stove, or above a sink or basin.

1. Remove the mounting template page from the back of the Use & Care booklet. Align the dashed line on the template with the front edge of the top side of the mounting surface and tape in place. Drill four 3⁄16" (5 mm) holes as indicated and remove the template from the mounting surface.

2. Select the desired number of spacers to use (see Table A on previous page). Place spacer(s) on top of can opener (if applicable).

3. Insert screw through one of the white plastic washers with the flat side of the washer away from the screw head (see Figure 1). Insert screw through hole drilled in mounting surface and into corresponding hole in can opener. Tighten several turns. Do not tighten all the way at this time. Repeat with remaining three screws.



Figure 1

4. Tighten all four screws. Do not overtighten.

Using Your Can Opener

To open cans:

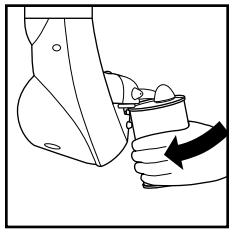

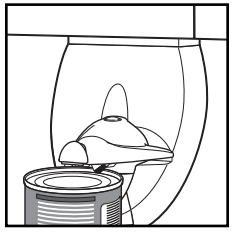

1. Plug cord into electrical outlet.
2. Raise piercing lever up.
3. Hold can against opener support.
4. Place rim of can firmly under can guide pin and against the geared wheel.
5. Press piercing lever all the way down.
6. The motor will begin turning can and cutting lid. (It is not necessary to hold the piercing lever down or to hold the can during the cutting action.)
7. The motor will automatically stop when the can is open.
8. **Remove can from can opener and check can contents to remove any pieces of label or metal shavings.**

To open bottles:

Support bottle beneath the bottle opener with one hand.
Place one hand behind the unit for additional support.
Open bottles slowly to avoid spilling contents.

Cleaning Your Can Opener

1. Unplug cord from electrical outlet.
2. To remove the cutting head assembly, press release button.
3. Wash cutting head assembly in hot soapy water. Rinse and dry thoroughly. Cutting head assembly may also be placed in top rack of dishwasher.
4. Wipe the can opener body and the area behind the cutting head assembly with a damp cloth. Never immerse the can opener in water.
5. To re-assemble, raise lever slightly then slide the assembly onto the body until the release button clicks into place.

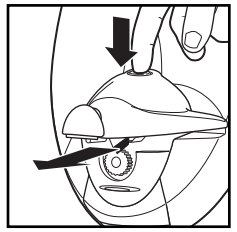

Remove

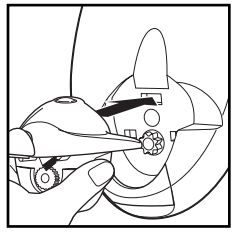

Re-assemble

Tips and Hints for Best Use

- The can opener will easily open all standard size cans.
- If there is a bump, dent, or heavy seam in the rim of the can, open the other end of the can or start cutter just beyond the problem area.
- The motor of your can opener is permanently lubricated and will require no oiling.
- To use the cord storage on the back of the opener, push in or pull out the cord as needed.
- If piercing lever does not move freely, remove and clean the cutting head assembly.
- To lock the cord, turn cord sideways and slide up into narrow portion of cord storage.

Customer Service

If you have a question about your can opener, call our toll-free customer service number. Before calling, please note the model, type, and series numbers and fill in that information below. These numbers can be found on the bottom of your can opener. This information will help us answer your question much more quickly.

MODEL:_____ **TYPE:**_____ **SERIES:** _____

The following warranty applies only to product purchased in the United States and Canada.

LIMITED WARRANTY

This product is warranted to be free from defects in material and workmanship for a period of two (2) years for Hamilton Beach Portfolio products, one (1) year for Hamilton Beach products or one hundred eighty (180) days for Proctor-Silex products from the date of original purchase, except as noted below. During this period, we will repair or replace this product, at our option, at no cost. THE FOREGOING WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. ANY LIABILITY IS EXPRESSLY LIMITED TO AN AMOUNT EQUAL TO THE PURCHASE PRICE PAID, AND ALL CLAIMS FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES ARE HEREBY EXCLUDED. There is no warranty with respect to the following, which may be supplied with this product: glass parts, glass containers, cutter/strainer, blades, and/or agitators. This warranty extends only to the original consumer purchaser and does not cover a defect resulting from abuse, misuse, neglect, use for commercial purposes, or any use not in conformity with the printed directions. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state, or province to province. Some states or provinces do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER SERVICE NUMBER. (For faster service please have model, series, and type numbers ready for operator to assist you.)

CUSTOMER SERVICE NUMBERS

In the U.S. 1-800-851-8900
In Canada 1-800-267-2826

hamiltonbeach.com or proctorsilex.com

KEEP THESE NUMBERS FOR FUTURE REFERENCE!

HAMILTON BEACH ⇕ PROCTOR-SILEX, INC.
263 Yadkin Road, Southern Pines, NC 28387

PROCTOR-SILEX CANADA, INC.
Picton, Ontario K0K 2T0

840123500

hamiltonbeach.com • hamiltonbeach.com.mx
proctorsilex.com • proctorsilex.com.mx

2/04